
Rev. Change		
А	Ambassador branded	
В		
С		
D		
Е		
F		
G		



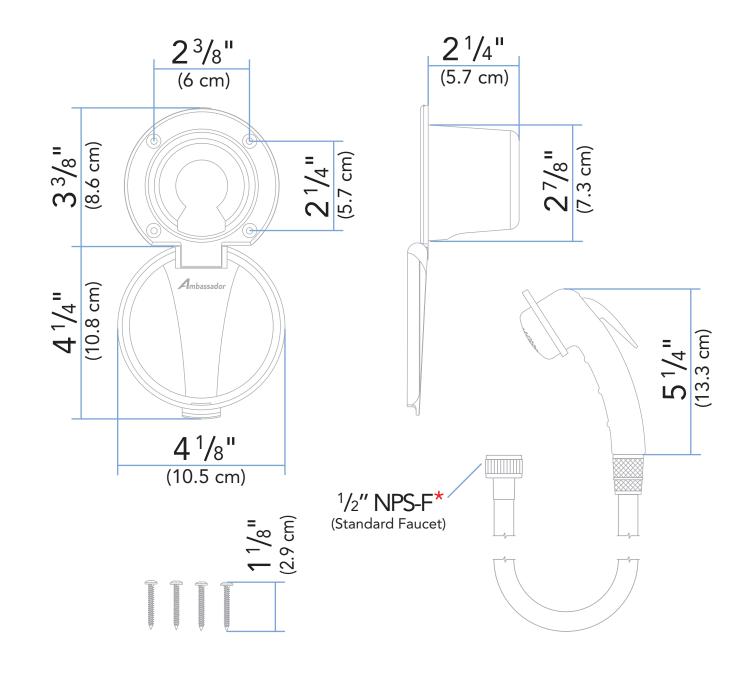

ALL DIMENSIONS ± 1/16" SOME COMPONENTS MAY NOT BE DRAWN TO SCALE Ambassador Marine Inc. reserves the right to make product specification changes and to change or discontinue models without notice or obligation

Installation Hole Requirement Supply Connection(s) This unit requires a *minimum* of this/these hole(s) * Understanding <u>NPS vs. NPT</u> <u>NPS</u> = National Pipe Straight <u>NPT</u> = National Pipe Tapered Threads (Male) Threads (Male) (<u>-M</u> = Male <u>-F</u> = Female) OR Plumbing fitting are commonly referred to as "NPT", however, in reality, nearly all faucets are actually "NPS". NPS is the North American "STANDARD" for faucets, regardless of brand, style, application, etc. Outside - **2** ⁷/8" • 3" -- 2 ⁷/8" • 3" -North America, BSP is the most commonly used standard. Both NPS and NPT have the same thread angle, shape, and pitch (threads per inch). Ho ever, NPS threads are straight (parallel) and NPT threads are tapered (reduced).

Deck-Mount

Wall-Mount

Straight Pipe thread is commonly found on faucets, showerheads, hose connections and fittings. Tapered Pipe thread is commonly found on pipe ends, nipples and fittings (i.e. couplings, elbows, tees, etc.). Straight Pipe threads need a gasket or o-ring to create a seal. Both styles require sealant or plumber's tape for optimal seal. While NPS and NPT threads will engage, they do not seal properly with each other.