Rev. Change Ambassador branded Spring Clip Latch Add Bag Rivet Holes Add Cup Bottom Ring Refreshed

G


Imbassador


www.ambass adormarine.com(800) 270-4262

136-0249-xx

Rev#

Ε

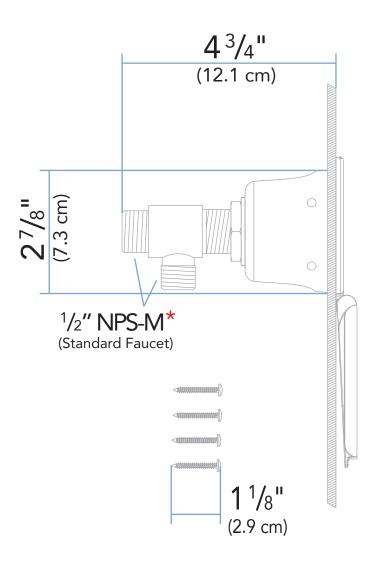

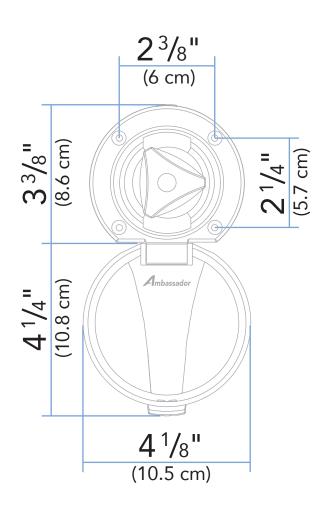

ALL DIMENSIONS ± 1/16" SOME COMPONENTS MAY NOT BE DRAWN TO SCALE

Ambassador Marine Inc. reserves the right to make product specification changes and to change or discontinue models without notice or obligation

Installation Hole Requirement


This unit requires a *minimum* of this/these hole(s)



OR



Deck-Mount Wall-Mount * Understanding NPS vs. NPT

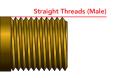



NPS = National Pipe Straight **NPT** = National Pipe Tapered (<u>-M</u> = Male $\underline{-F}$ = Female)

Plumbing fitting are commonly referred to as "NPT", however, in reality, nearly all faucets are actually "NPS". NPS is the North American "STANDARD" for faucets, regardless of brand, style, application, etc. Outside

North America, BSP is the most commonly used standard.

Both NPS and NPT have the same thread angle, shape, and pitch (threads per inch). Ho Straight Pipe thread is commonly found on faucets, showerheads, hose connections and fittings. Tapered Pipe thread is commonly found on pipe ends, nipples and fittings (i.e. couplings, elbows, tees, etc.). Straight Pipe threads need a gasket or o-ring to create a seal. Both styles require sealant or plumber's tape for optimal seal. While NPS and NPT threads will engage, they do not seal properly with each other.

Supply Connection(s)