	Rev. Change
Α	SHURflo branded
В	Ambassador branded
С	Refreshed
D	
Е	
F	

G




www.ambassadormarine.com (800) 270-4262


Rev#

Model #

133-0202-xx

C

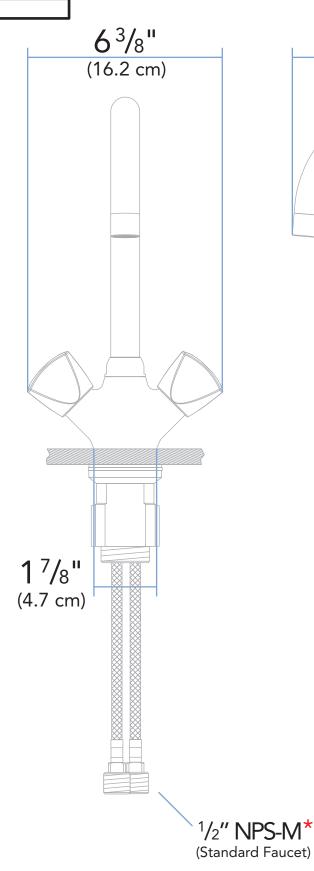

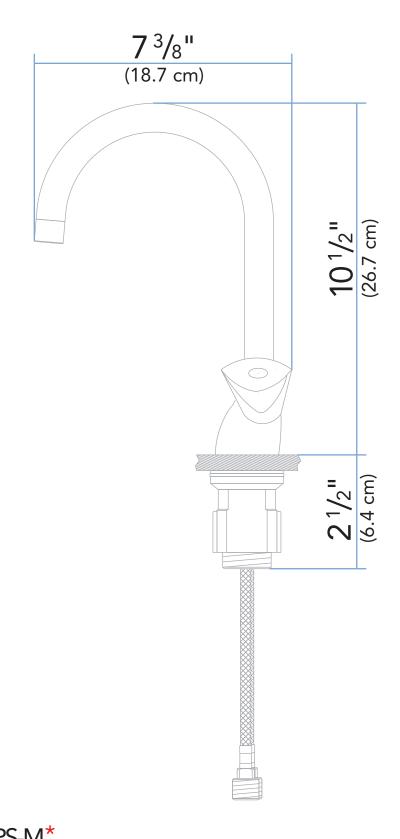

ALL DIMENSIONS \pm 1 / $_{16}$ " SOME COMPONENTS MAY NOT BE DRAWN TO SCALE

Ambassador Marine Inc. reserves the right to make product specification changes and to change or discontinue models without notice or obligation

Installation Hole Requirement

This unit requires a *minimum* of this/these hole(s)



four existing sink/countertop may have additional hole(s) pre-drilled, which may not be required for this installation

If it does, you may be able to utilize a deck/cover plate or installal an additional accessory (i.e. soap dispenser,

We offer a variety of deck/cover plates and soap dispensers to coordinate with your faucet and decor.

* Understanding <u>NPS vs. NPT</u>





 \underline{NPS} = National Pipe Straight \underline{NPT} = National Pipe Tapered ($\underline{-M}$ = Male $\underline{-F}$ = Female)

Plumbing fitting are commonly referred to as "NPT", however, in reality, nearly all faucets are actually "NPS". NPS is the North American "<u>STANDARD</u>" for faucets, regardless of brand, style, application, etc. Outside

North America, BSP is the most commonly used standard.

Both NPS and NPT have the same thread angle, shape, and pitch (threads per inch). However, NPS threads are straight (parallel) and NPT threads are tapered (reduced).

Straight Pipe thread is commonly found on faucets, showerheads, hose connections and fittings. Tapered Pipe thread is commonly found on pipe ends, nipples and fittings (i.e. couplings, elbows, tees, etc.). Straight Pipe threads need a gasket or o-ring to create a seal. Both styles require sealant or plumber's tape for optimal seal. While NPS and NPT threads will engage, they do not seal properly with each other.

Supply Connection(s)