
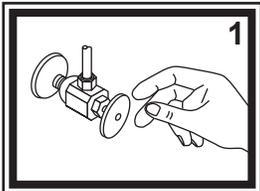



## INSTALLATION INSTRUCTIONS

Thank you for choosing Ambassador Marine.


Your new Ambassador Marine faucet, sprayer, shower or accessory will give you years of trouble-free performance. Please read these instructions carefully before installing your new item. If you have any additional questions about the installation of this product, please feel free to contact one of our friendly customer service representatives at 800.270.4262.

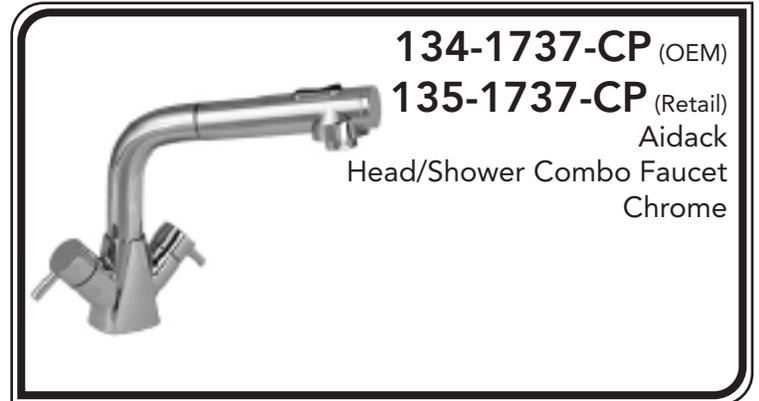


1) Turn off the water supply to your existing faucet (this procedure will vary depending on the specific plumbing system installed on your boat). Cover the sink drain to prevent any small parts or debris from falling in. Remove your existing faucet, taking care not to damage your existing water lines. Clean sink area in preparation for new faucet.

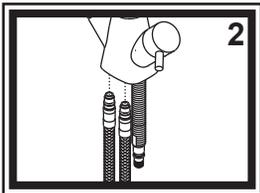


2) Attach the connector hoses to the bottom of the faucet body. Screw the red hose into the left hole (hot inlet) and the blue hose into the right hole (cold inlet), when looking at the faucet body from the front. It is not necessary to use Teflon (plumber's) tape when screwing the hoses into the body, as the o-rings on the tips of the hoses will form a seal.

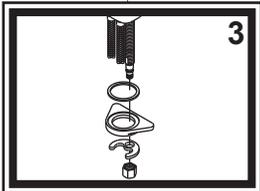


3) Place the faucet in the hole (1 1/4" to 1 3/8" diameter hole - standard size) of the sink, ensuring the rectangular gasket lines up with the base of the faucet body. Slide the round rubber gasket, mounting support, metal horseshoe washer (ensuring that they all line up together) and then the mounting nut onto the mounting shaft, as illustrated and hand tighten the mounting nut. Position the faucet on the sink. Tighten the mounting nut.

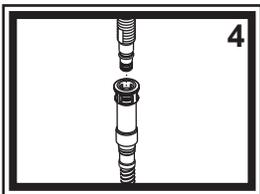

4) Ensure the quick connect housing is screwed all the way onto the pull-out hose. Remove the protective cap covering the o-rings on the male fitting on the end of the mounting shaft. Push the quick connect housing firmly onto the mounting shaft's male fitting, until you feel it "snap" into place. Gently, but firmly pull down on the quick connect housing to ensure that it is properly secured. If the quick connect housing pulls off the mounting shaft, repeat step 3. If it becomes necessary to disconnect the quick connect housing from the mounting shaft after it is secured, simply lift up on the top collar/ring to disengage the quick release while pulling down on the housing.

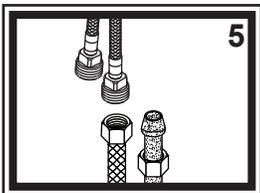


5) Connect hot and cold water supplies (not provided) to the 1/2" NPS-Male connector hose fittings. Hot supply will connect to the red hose, cold supply will connect to the blue hose. Wrap the 1/2" NPS-Male brass fittings on the connector hoses with Teflon (plumber's) tape. Follow the appropriate steps depending on your water supply lines. If you have pre-assembled water supply hoses with threaded connectors, simply screw on supply lines. If you have plastic water lines with formed ends, water lines will seat partially up into the brass fittings. Connect by tightening the coupling nuts. We do NOT suggest using sweat fittings as they are prone to blow-outs.

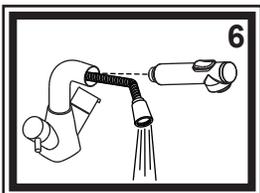


6) Pull the spout head a few inches out from the faucet and unscrew the spout head from the pull-out hose. Aim the hose down into the sink. Turn the water supply back on and allow both hot and cold water to run for at least one full minute without the spout head. While water is running, check all connections for leaks. Replace the spout head. Connections may need re-tightening.

## Parts

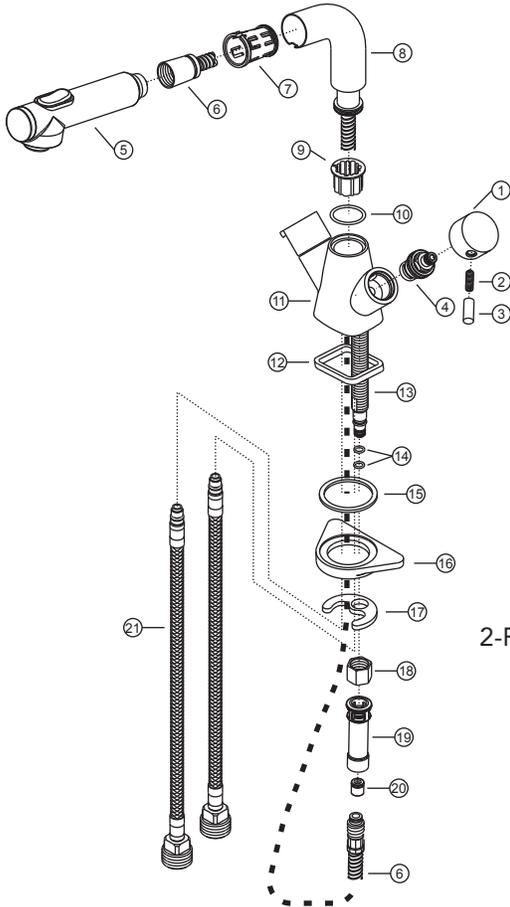

- 1) Aidack Handle Canopy
- 2) Handle Set Screw
- 3) Aidack Handle Tip
- 4) Ceramic Disc Cartridge
- 5) Spout Head
- 6) 6' Stainless Steel Hose
- 7) Hose Nest
- 8) Spout
- 9) Spout Connector
- 10) O-Ring
- 11) Body
- 12) Gasket
- 13) Mounting Shaft
- 14) O-Rings
- 15) Gasket
- 16) Mounting Support
- 17) Metal Horseshoe Washer
- 18) Mounting Nut
- 19) Quick Connect Housing
- 20) Back Flow Preventer
- 21) Connector Hoses

Need our matching  
2-Position Bulkhead Sprayer Holder?  
Ask for:  
130-0042-CP or 131-0042-CP

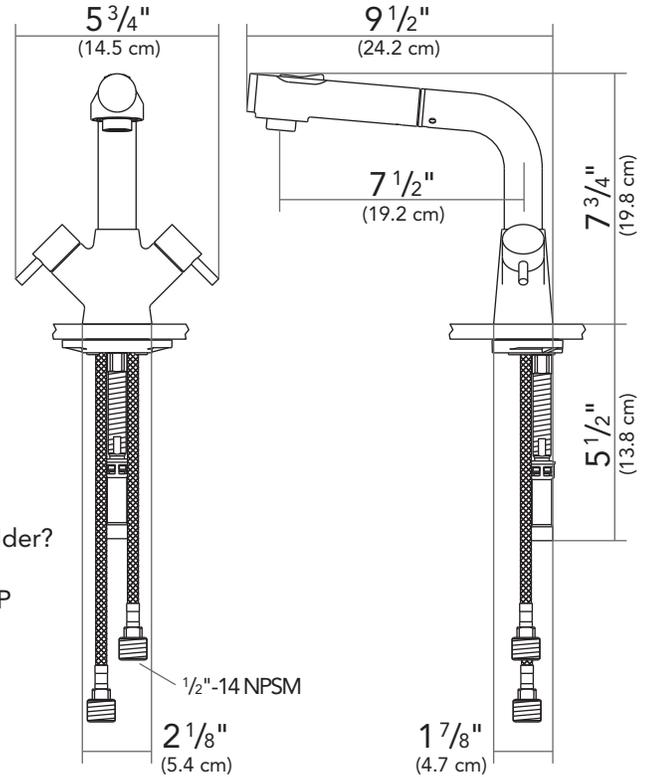

## PROPER FINISH CARE

Your new faucet or accessory is protected by a clear-coat. To clean it, you only need to wipe it with a damp, soft cloth. NEVER use any abrasive cleaners, steel wool, or chemicals (including alcohol or ammonia), as they will harm the finish and void your warranty. If the item will be installed in a salt-air environment (boat exterior), regular cleaning with gentle soap and carnauba wax will prolong the life of the finish.

Visit our web site at [www.ambassadormarine.com](http://www.ambassadormarine.com)

Ambassador Marine reserves the right to update specifications, change prices, or make substitutions without notice.

## LIMITED WARRANTY

Ambassador Marine faucets and accessories are guaranteed to be free from material and workmanship defects under normal use and service for a period of five (5) years from the date of purchase. This warranty will not apply to faucets or accessories that were improperly installed, misapplied, or incompatible with components not manufactured by Ambassador. Faucet failures due to foreign debris is not covered under the terms of this limited warranty. Ambassador will not warrant any faucet or accessory that is physically damaged, or altered outside the Ambassador factory.

Returns are to be shipped postage prepaid to Ambassador Marine's service center at: 1173 Calle Suerte, Camarillo, CA 93012.

A Return Authorization Number is required and must be clearly visible on the shipping carton.

Absolutely no credit or payment will be allowed for consumers on any item deemed defective. Ambassador Marine's obligation is limited to the repair or replacement of the defective item only, at Ambassador Marine's sole discretion. All returns will be examined and/or tested under Ambassador Marine test criteria. Replacements will be shipped freight prepaid.

This limited warranty is in lieu of all other warranties, expressed or implied, and no other person is authorized to give any other warranty or assume obligation or liability on Ambassador Marine's behalf. Ambassador Marine shall not be liable for any labor, damages, or other expenses, nor shall Ambassador Marine be liable for any indirect, incidental or consequential damages of any kind incurred by the use or sale of any defective product.

This limited warranty covers Marine Products sold or distributed in the United States and Canada only. Customers who purchase Ambassador Marine products sold by distributors in other countries must consult their local distributors for their warranty policy. This warranty is only a representation of the complete Ambassador Marine warranty outlined on the Ambassador Marine website and/or catalog.